Top case rack

KTM 790 890

ID:298782

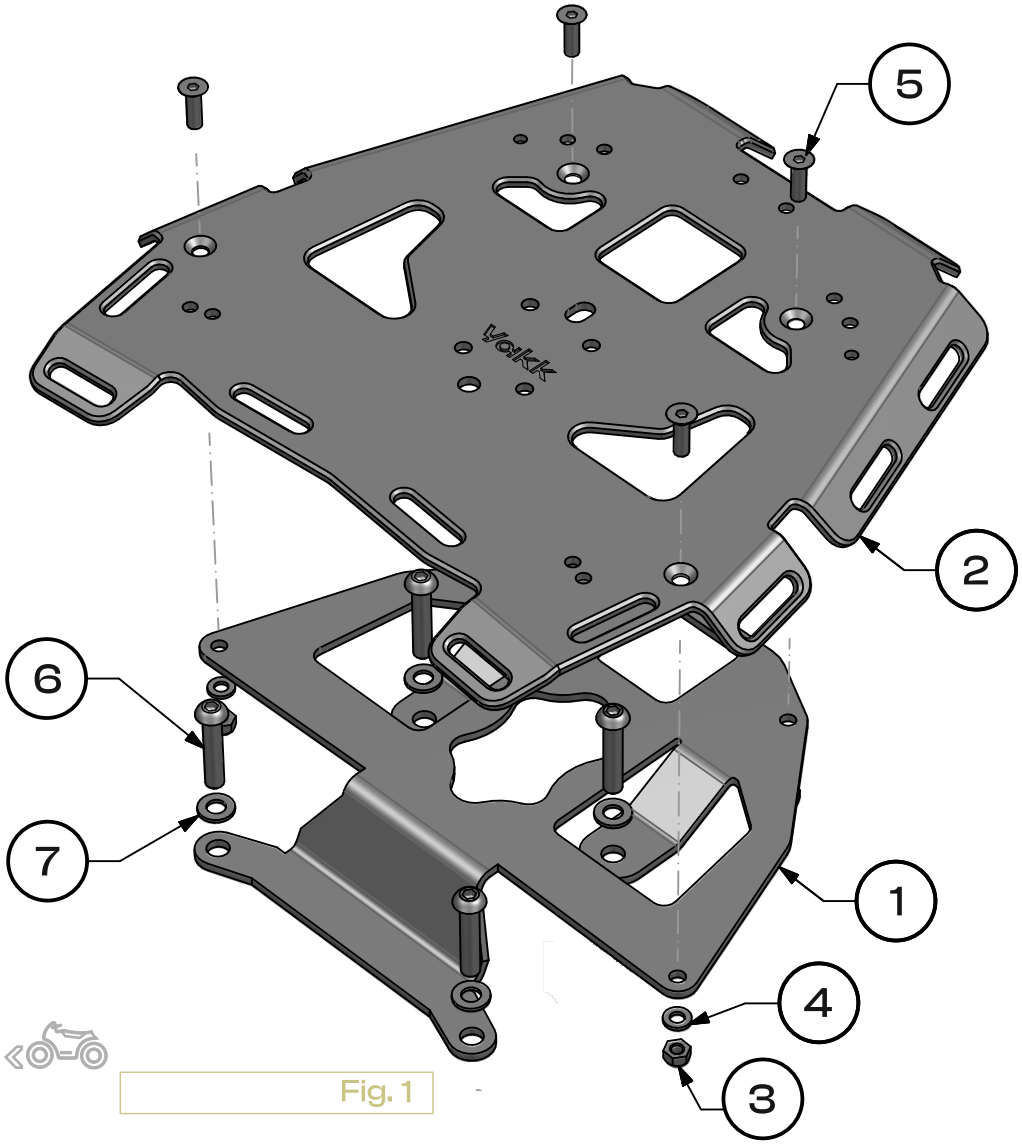


Fig. 1

1 Mounting plate	1×	
2 Top case plate	1×	
3 Nut	4×	M6 DIN 985
4 Washer	4×	M6-DIN 125
5 Bolt	4×	M6x20-DIN 7991
6 Bolt	4×	M8x40-DIN 738
7 Washer	4×	M8-DIN 125

Read before installation.
All bolts have to be finaly tighten after installation all parts on vehicle.

one person | use a medium-stregth | tighten with torque | OEM Original Equipment Manufacturer

Loosen the original mounting screws of the brackets **OEM** **[Fig. 2]**

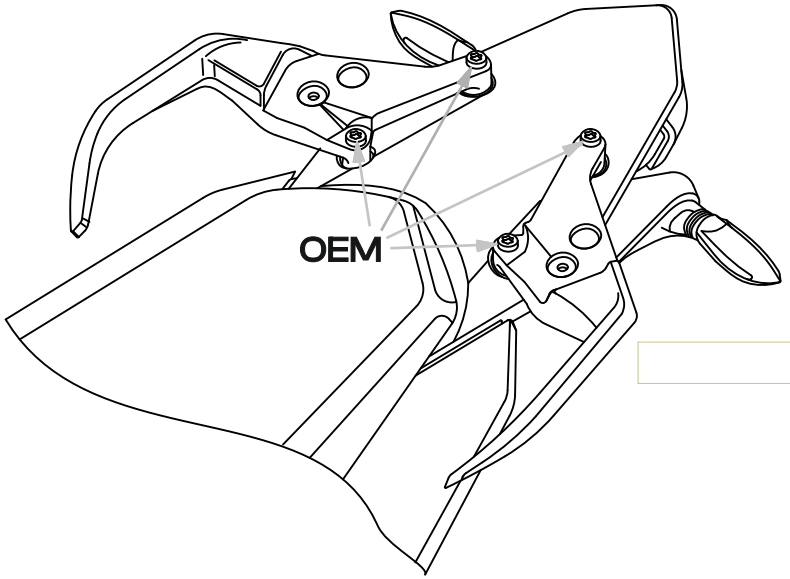


Fig. 2

Tighten the Top case plate **(3)** to the Mounting plate **(1)** with Bolt **(6)** through Washer (5) and secure with Nut **(4)** **[Fig. 4]**

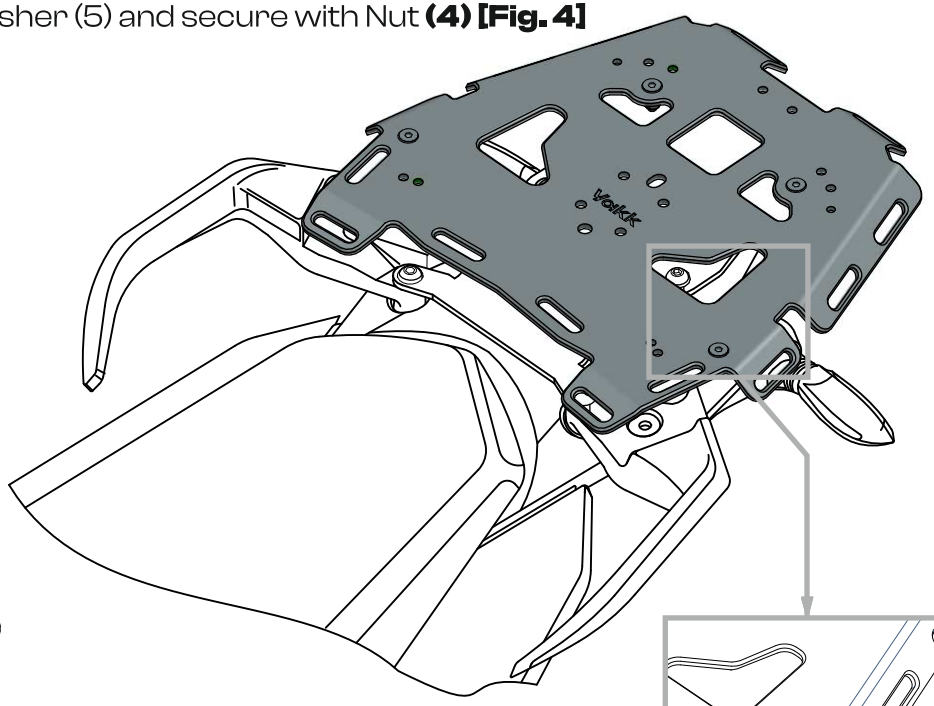
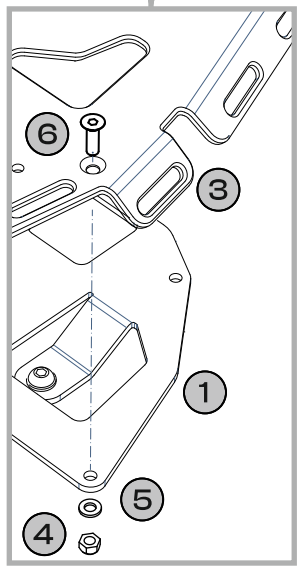


Fig. 4



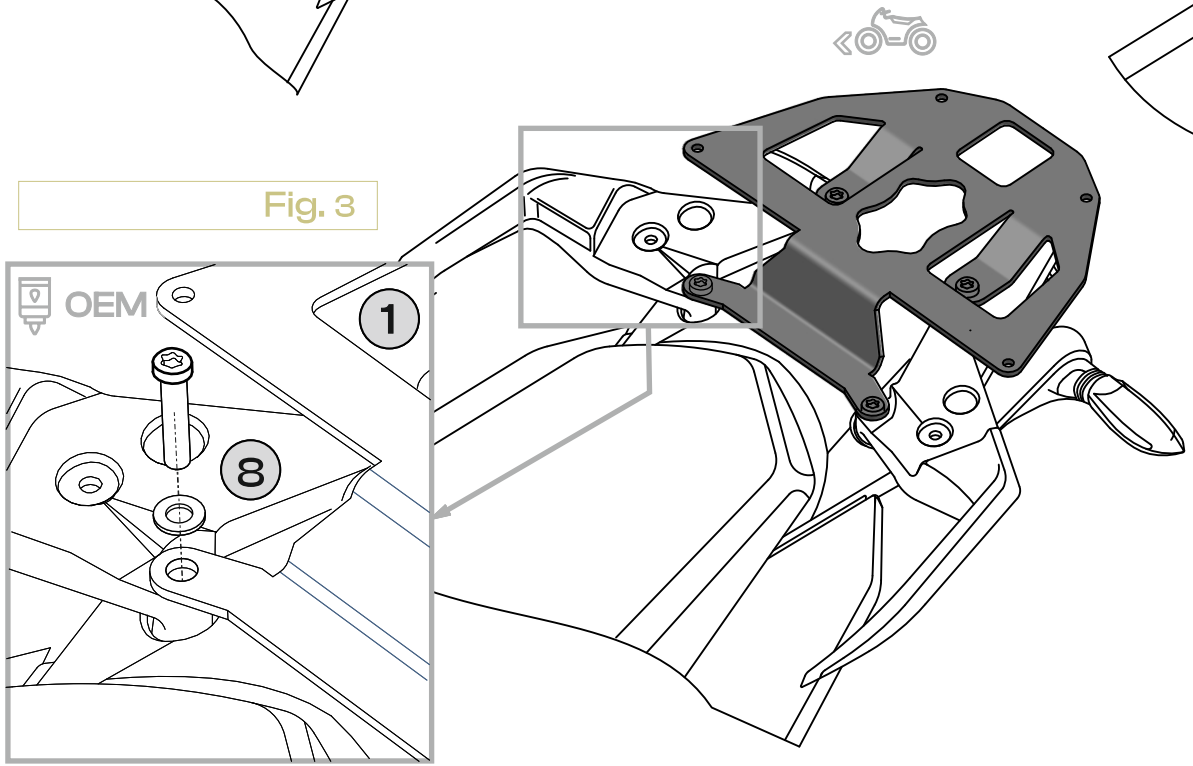


Fig. 3

	Steel 8.8
M4	2,7
M5	5,5
M6	9,7
M8	23,0
M10	47,0
M12	80,0
M14	130,0
M16	196,0
M18	270,0
M20	385,0

Tighten the Mounting plate **(1)** with the original screws **(OEM)**, apply glue **[Fig] 3]**