side carrier

BMW R 1300 GS

ID:2995820

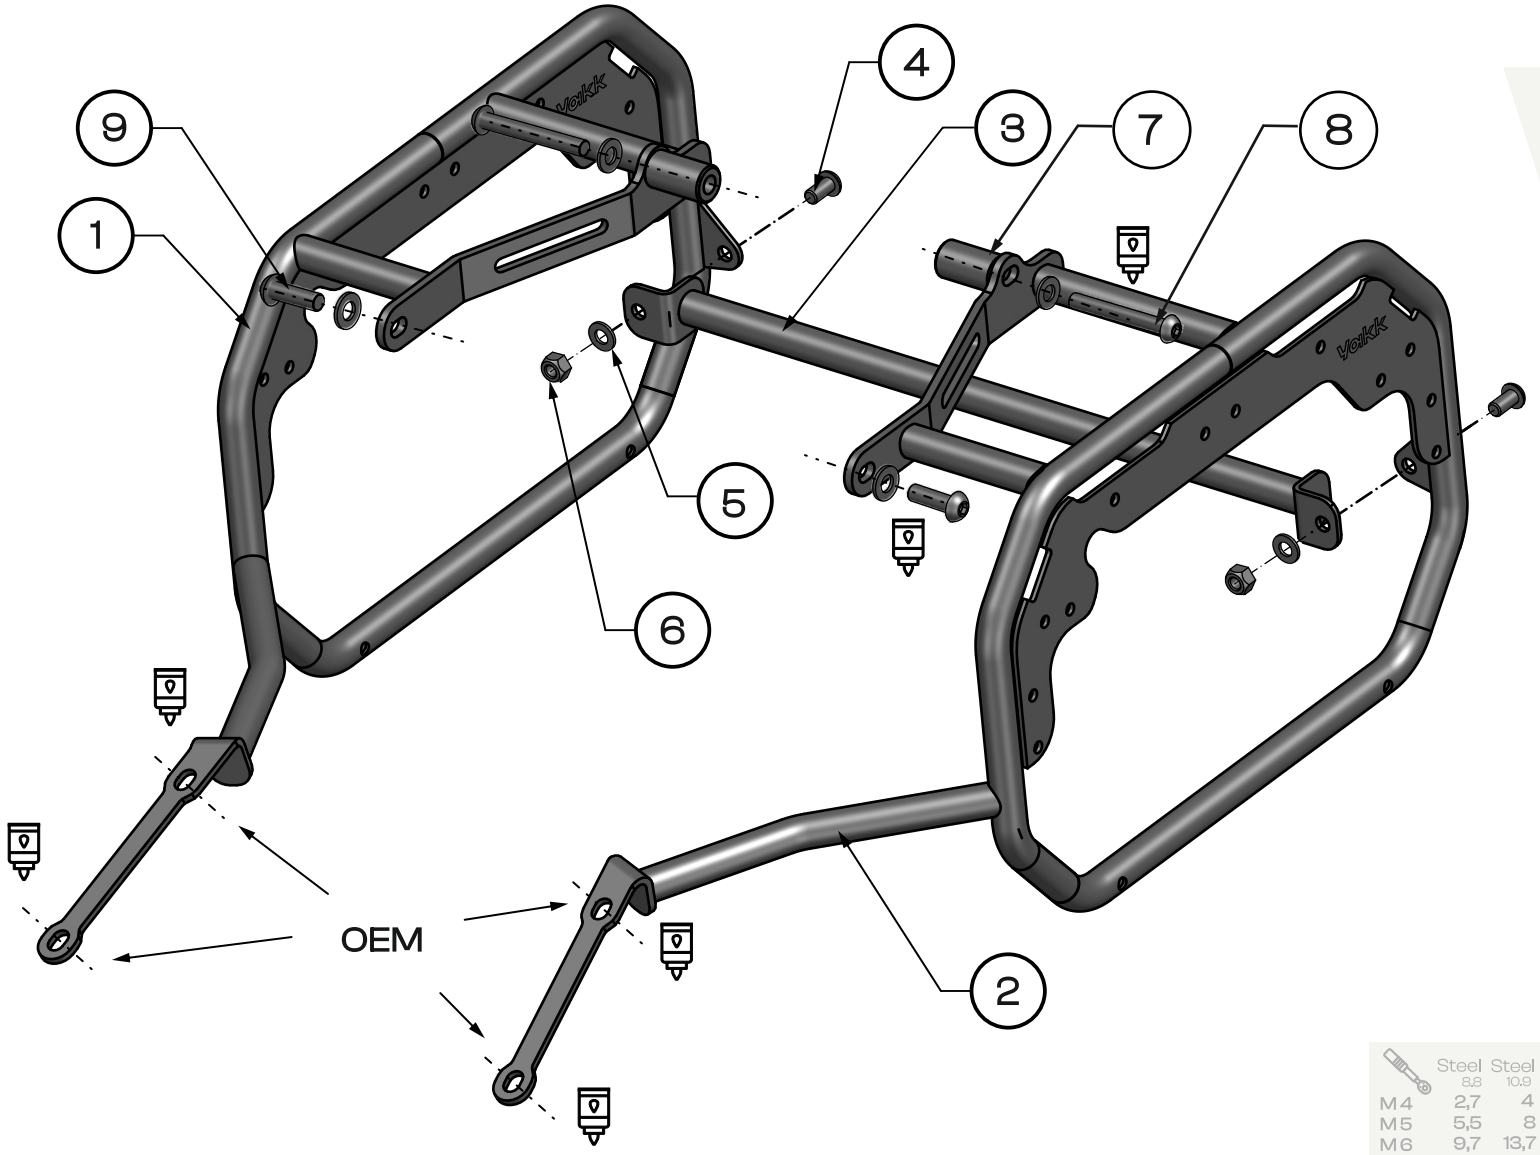


Fig. 1

	Steel 8.8	Steel 10.9	Steel 12.9
M4	2,7	4	4.9
M5	5,5	8	9.8
M6	9,7	13,7	16
M8	23	33	40
M10	47	66	83
M12	80	116	150
M14	130	184	240
M16	196	287	350
M18	270	395	490
M20	385	560	690

Read before installation.
All bolts have to be finaly tighten after installation all parts on vehicle.

one person | use a medium-stregth | tighten with torque | OEM Original Equipment Manufacturer

1 Side rack right — 1×




2 Side rack left — 1×



3 Connector — 1×



4 Bolt — M8x16 -DIN 7380 2×




5 Washer — M8-DIN 125 6×



6 Nut — M8-DIN 985 2×




7 Spacer sleeve — D20xd10xH35 2×

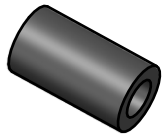

8 Bolt — M8x60 -DIN 7380 2×



9 Bolt — M8x25 -DIN 7380 2×



Yakk EXP

assembly instructions

yakkexp.com

EXPLORE POSSIBILITIES

Read before installation.
All bolts have to be finaly tighten after install ation all parts on vehicle.

1. Loosen the original screws shown on both sides and remove the bracket. **[Fig. 3]**

2. Loosen the original screws shown and remove the passenger footrests **[Fig. 4]**

3. Loosen the original screws shown and remove the passenger footrests and silencer bracket. **[Fig. 5]**



Fig. 2

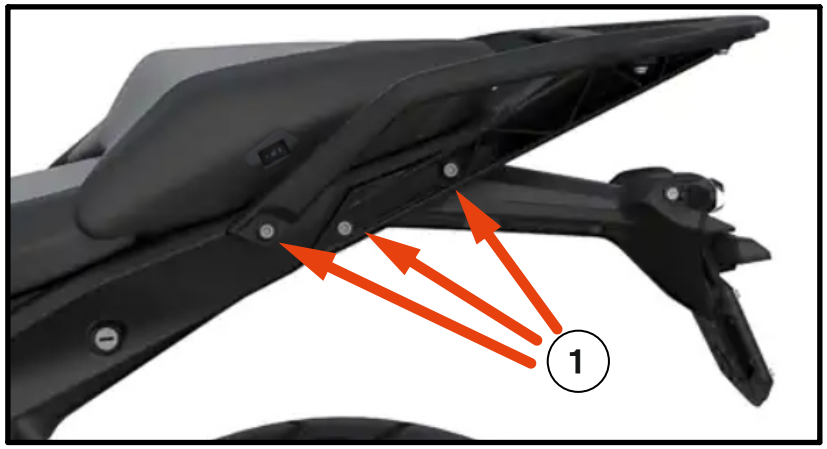


Fig. 3

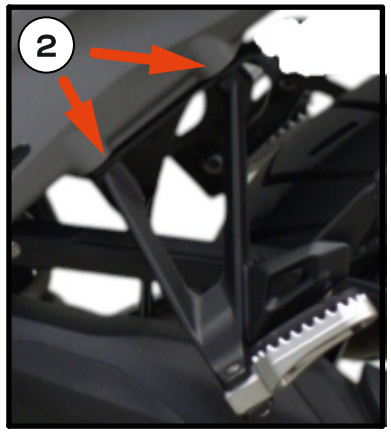


Fig. 4

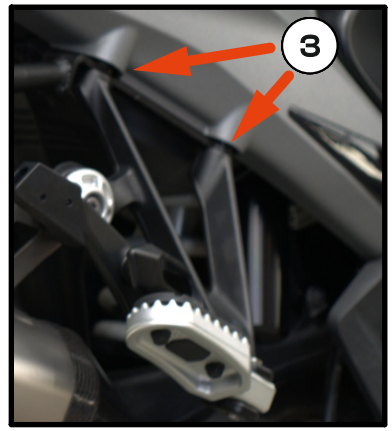


Fig. 5

one person | use a medium-stregth | tighten with torque | OEM Original Equipment Manufacturer

Read before installation.
All bolts have to be finaly tighten after install ation all parts on vehicle.

follow yakkexp join #yakkherd


The instruction applies only to the installation of the side racks

4. Tighten the left and right racks using the original screws and the passenger footrests. Use a medium-strength. **[Fig. 6]**

5. Fasten the side rack **[1] , [2]** using the screw **[9]** and washer **[5]** at the specified location. Use threadlocker. **[Fig. 6 , 7]**

6. Fasten the side rack **[1] , [2]** using the screw **[8]** , washer **[5]** and spacer sleeve at the specified location. Use threadlocker. **[Fig. 6 , 7]**

7. Join the left and right side racks **[1], [2]** using connector **[3]** and screw **[4],** then secure with nut **[6]** and washer **[5]. [Fig. 1 , 8]**

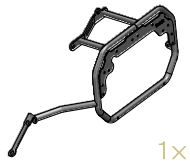1 Side rack right	2 Side rack left	7 Spacer sleeve	8 Bolt	9 Bolt	5 Washer	3 Connector	4 Bolt	6 Nut
								
1×	1×	D20xd10xH35 2×	M8x60 -DIN 7380 2×	M8x25 -DIN 7380 2×	M8-DIN 125 6×	1×	M8x16 -DIN 7380 2×	M8-DIN 985 2×

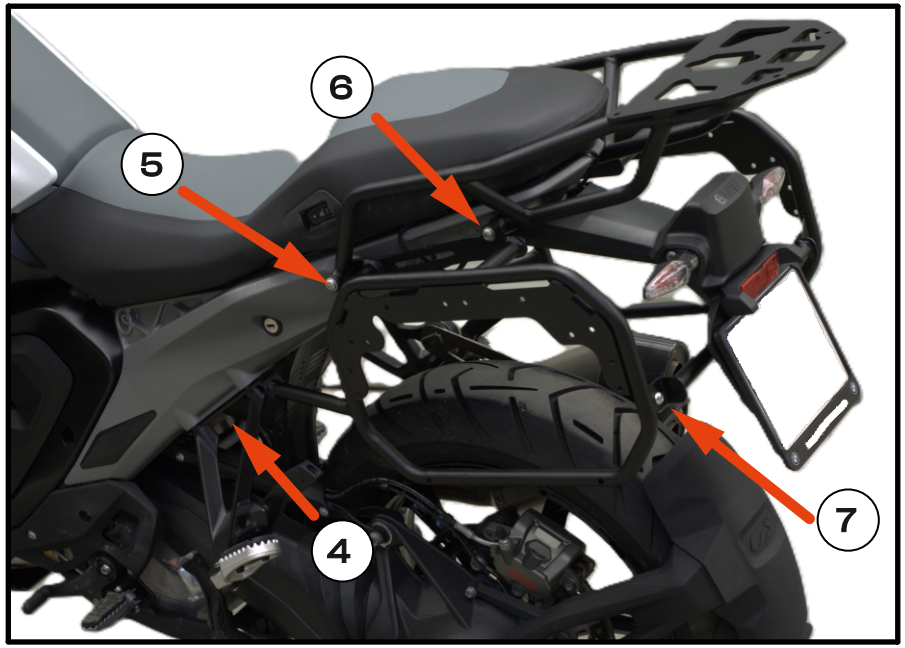


Fig. 6

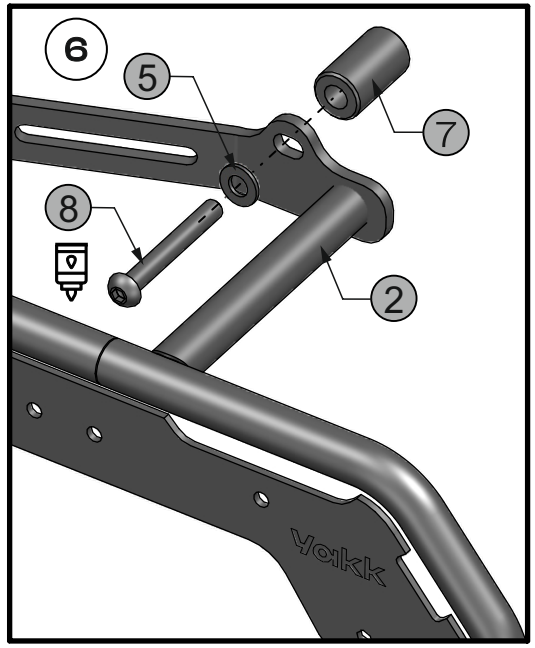


Fig. 7

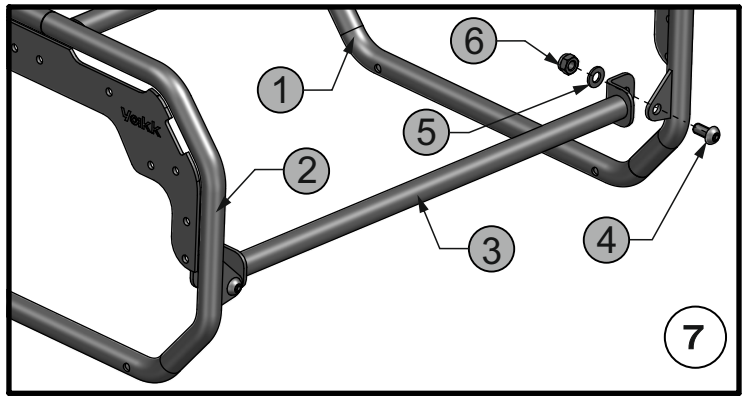


Fig. 8

one person | use a medium-stregth | tighten with torque | OEM Original Equipment Manufacturer

Topcase rack / side carrier

BMW R 1300 GS

ID:2995821 / ID:2995820

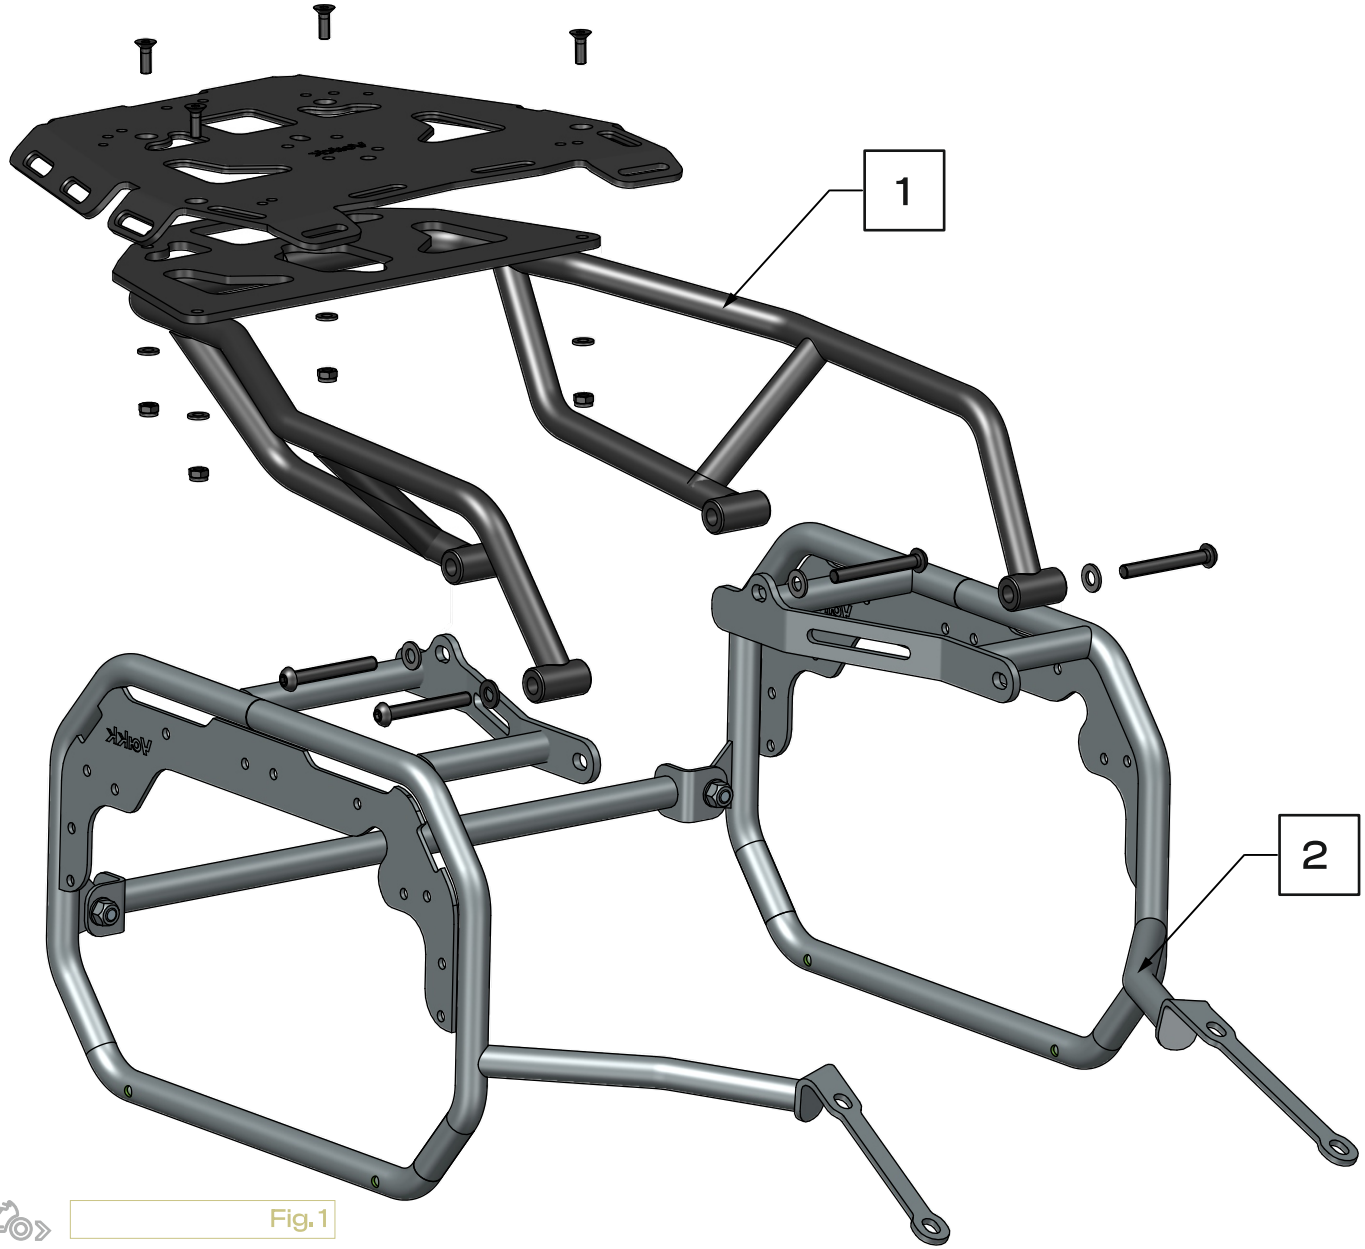


Fig. 1

1 Yaak exp ID: 2995821



2 Yaak exp ID: 2995820



	Steel 8.8	Steel 10.9	Steel 12.9
M4	2,7	4	4.9
M5	5,5	8	9.8
M6	9,7	13,7	16
M8	23	33	40
M10	47	66	83
M12	80	116	150
M14	130	184	240
M16	196	287	350
M18	270	395	490
M20	385	560	690

Read before installation.
All bolts have to be finaly tighten after installation all parts on vehicle.

one person · use a medium-stregth · tighten with torque · OEM Original Equipment Manufacturer