Read before installation.

Radiator guard

Yamaha T7 Tenere 700 25 -

ID:3092524

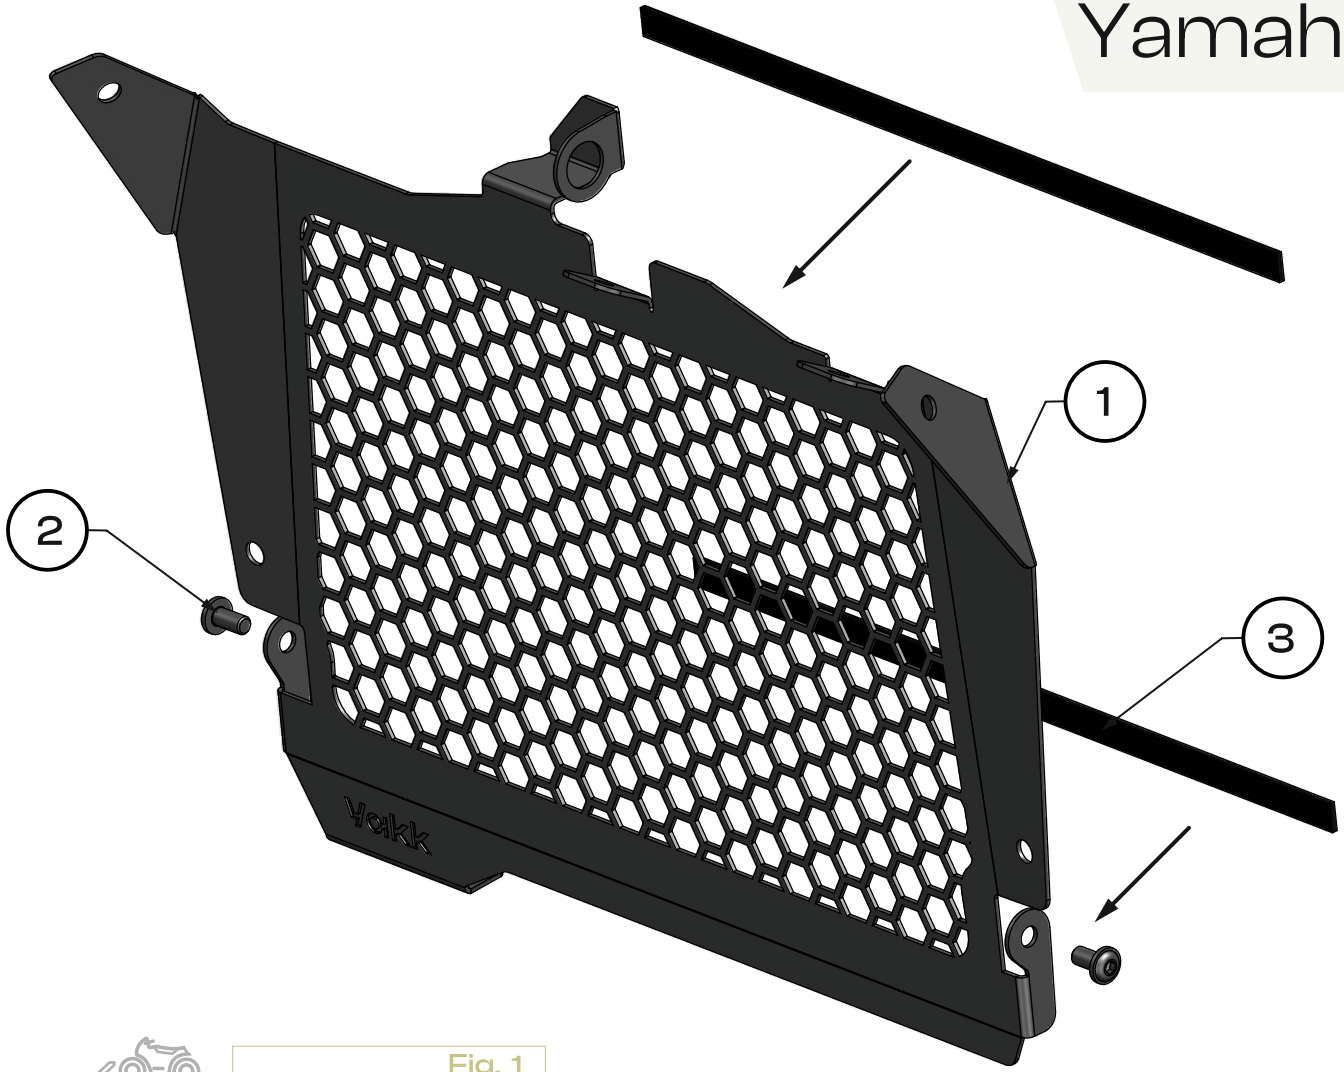


Fig. 1

1 Radiator Guard — 1×

2 Bolt — M6x12 DIN7380 — 2×

3 Damping pad — 2×

	Steel 8.8	Steel 10.9	Steel 12.9
M4	2,7	4	4.9
M5	5,5	8	9,8
M6	9,7	13,7	16
M8	23	33	40
M10	47	66	83
M12	80	116	150
M14	130	184	240
M16	196	287	350
M18	270	395	490
M20	385	560	690

All bolts have to be finaly tighten after installation all parts on vehicle.

one person — use a medium-stregth — tighten with torque

OEM Original Equipment Manufacturer

!!! Use a medium-strength threadlocker on the bolts indicated in the figures

Unscrew and remove the plastic radiator guard. Loosen and pivot the side covers. Remove the upper mounting together with the OEM rubber grommet. **[Fig. 2], [Fig. 3].**

Attach **[3]** rubber pad to **[1]** radiator guard in the designated locations. Install the **OEM** rubber grommet from the front radiator guard. Secure [1] radiator guard using the **OEM** bolts and the longer **[2]** bolt M6×12 - DIN 7380. **[Fig. 3], [Fig. 4].**



Fig. 3

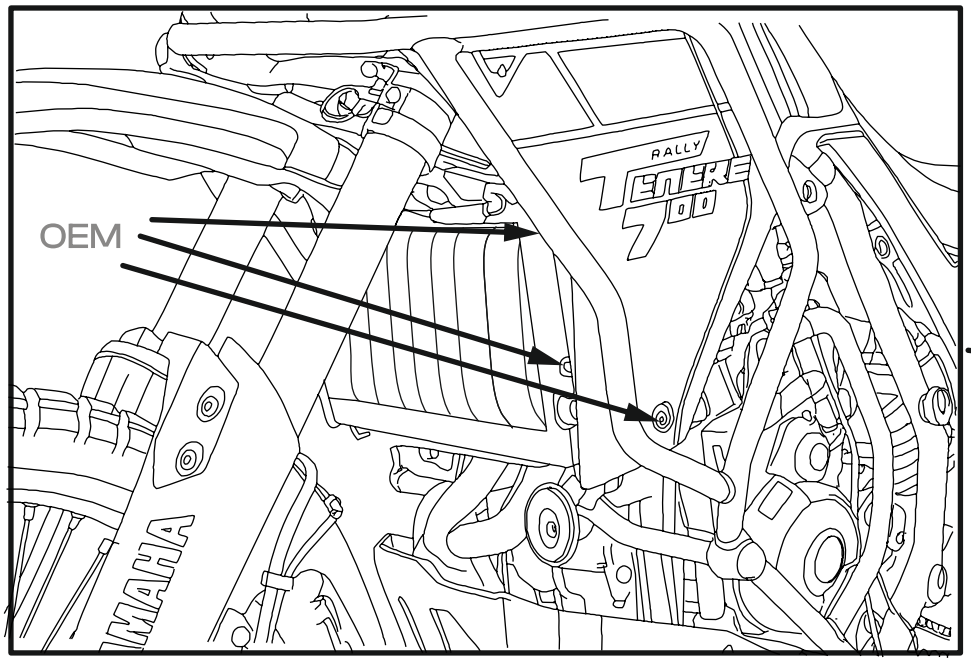


Fig.2

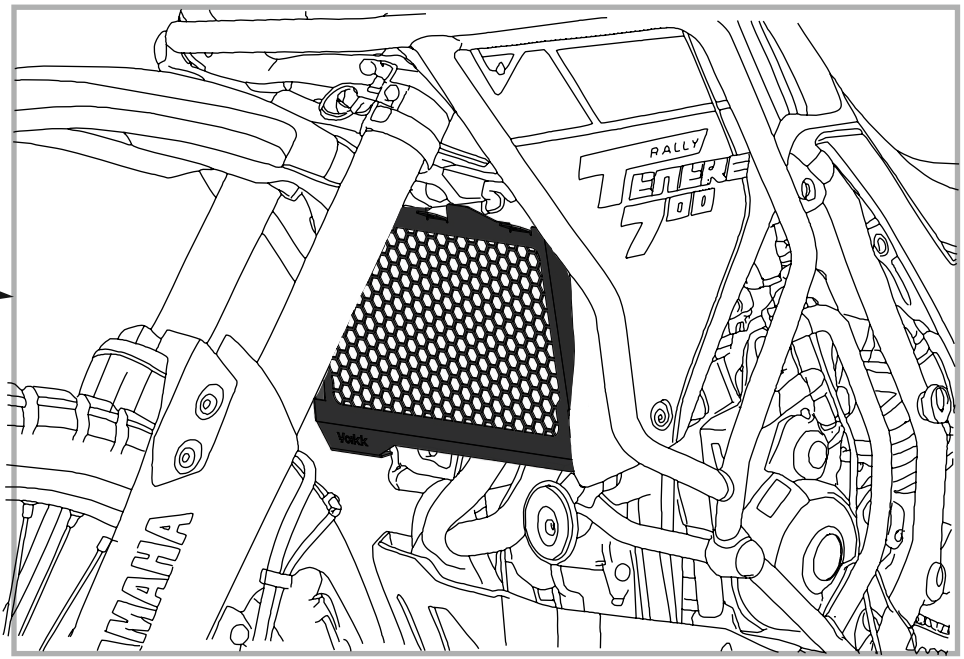


Fig. 4

All bolts have to be finaly tighten after installation all parts on vehicle.