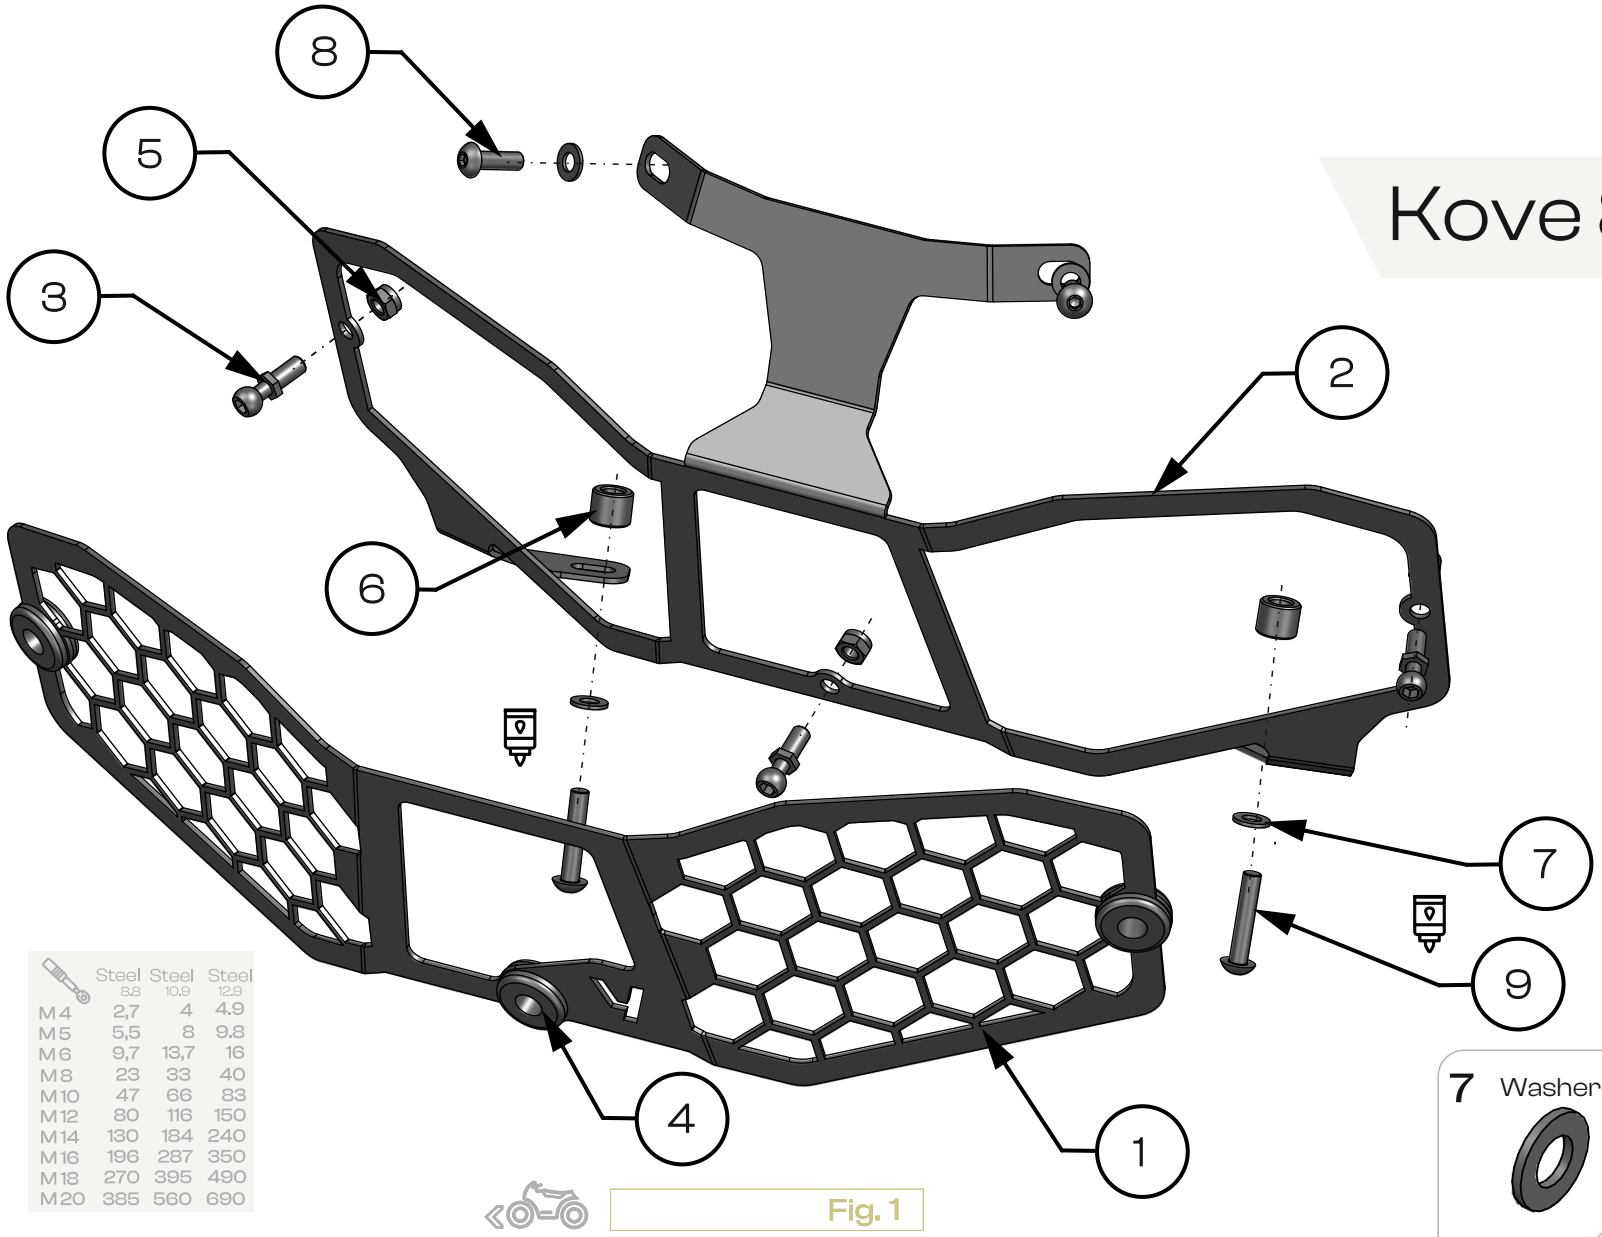
Headlight guard

Kove 800X Pro\ Rally

ID:3100876



	Steel 8.8	Steel 10.9	Steel 12.9
M4	2,7	4	4.9
M5	5,5	8	9.8
M6	9,7	13,7	16
M8	23	33	40
M10	47	66	83
M12	80	116	150
M14	130	184	240
M16	196	287	350
M18	270	395	490
M20	385	560	690

Fig. 1

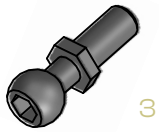
1 Headlight guard — 1x



2 Frame — 1x




3 Bolt — 3x



4 Grommets — 3x



5 Nut — M5-DIN 985 — 3x



6 Spacer — d6xD10xh9 — 2x



7 Washer — M5-DIN 125 — 4x

8 Bolt — M5x16-DIN 7380 — 2x



9 Bolt — M5x25-DIN 7380 — 2x



Read before installation.
All bolts have to be finaly tighten after installation all parts on vehicle.

one person — use a medium-stregth — tighten with torque — OEM Original Equipment Manufacturer — lublicrate

Yakk EXP


assembly instructions

yakkexp.com

EXPLORE POSSIBILITIES

1. Screw **(3)** fastening the frame **(2)**, tighten with nut **(5)**. **[Fig. 2]**

2. Lubricate the indicated elements with a lubricant — oil, grease, or olive oil. **[Fig. 3]**

2 Frame	3 Bolt	5 Nut
 1x	 3x	 M5-DIN 985 3x

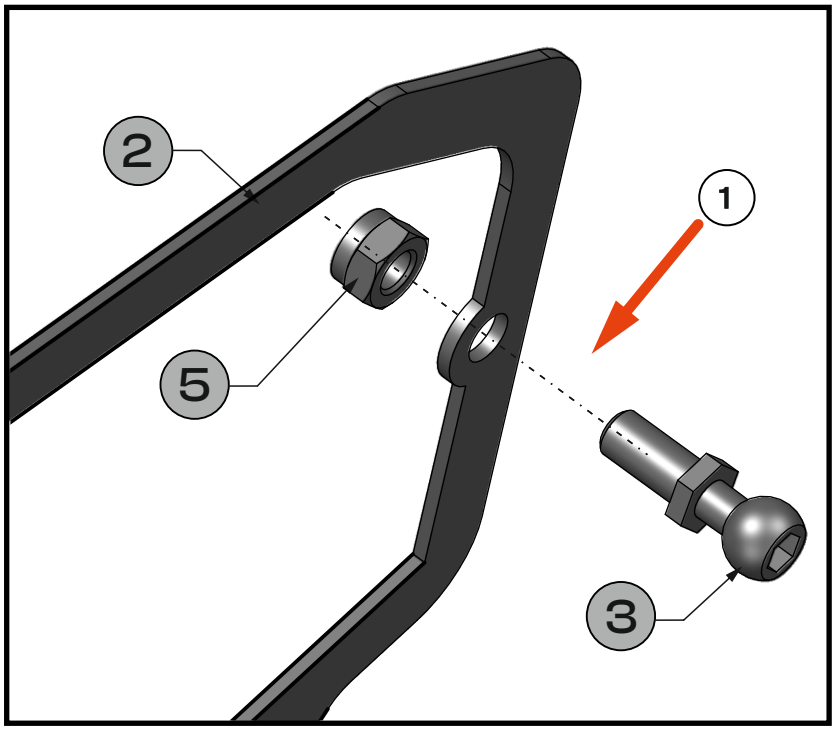


Fig. 2

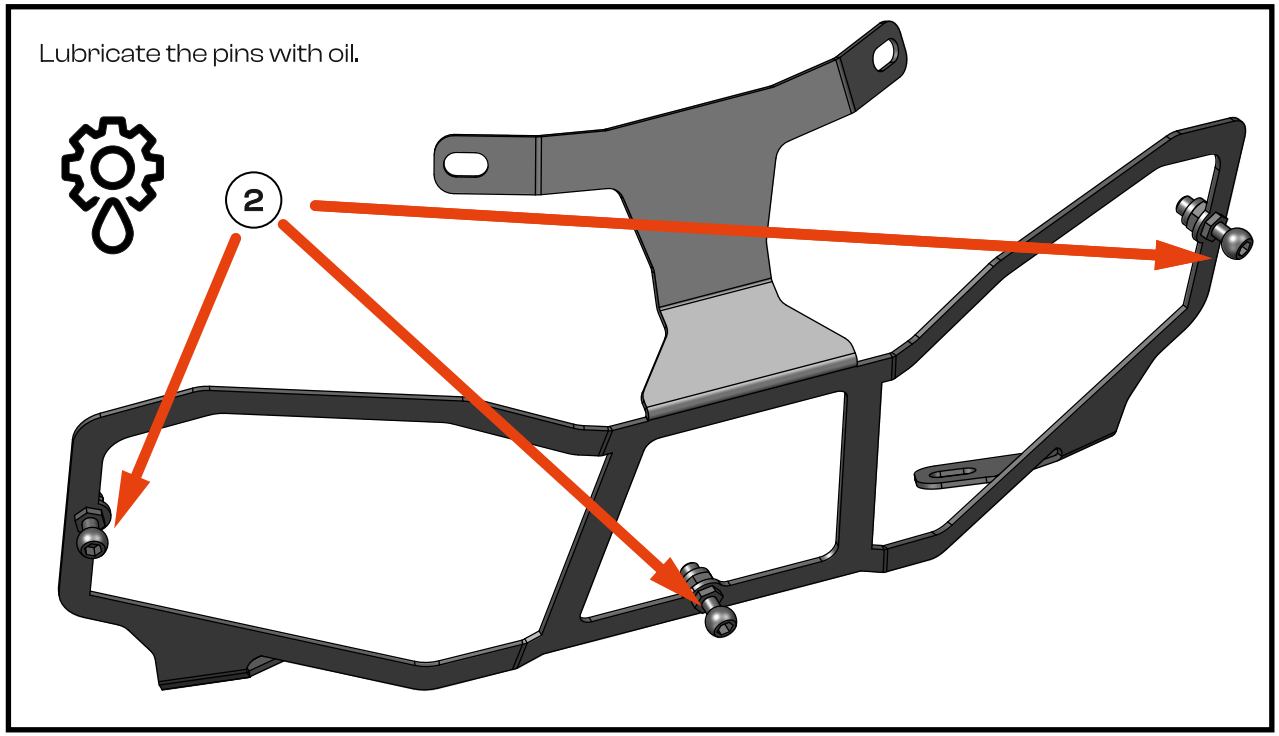


Fig. 3

4. Unscrew the indicated screws; a pair of them is underneath the cover on the bottom. **[Fig. 4] , [Fig. 7] ,**
5. Attach frame **[2]** in the indicated place using bolt **[8],** and washer **[7]**. Use medium-strength adhesive.**[Fig. 1], [Fig. 6]**
6. Fasten frame **[2]** in the indicated place using bolt **[9]** and spacer **[6]**. Use medium-strength adhesive.**[Fig. 1], [Fig. 6], [Fig. 7]**
7. Mount the Headlight guard **[1]** onto frame **[2]** by pressing the grommets **[4]** onto the lubricated pins **[3]. [Fig. 1] , [Fig. 6]**

1 Headlight guard — 1×

2 Frame — 1×

6 Spacer — d6xD10xh9 — 2×

7 Washer — M5-DIN125 — 4×

8 Bolt — M5x16-DIN 7380 — 2×

9 Bolt — M5x25-DIN 7380 — 2×

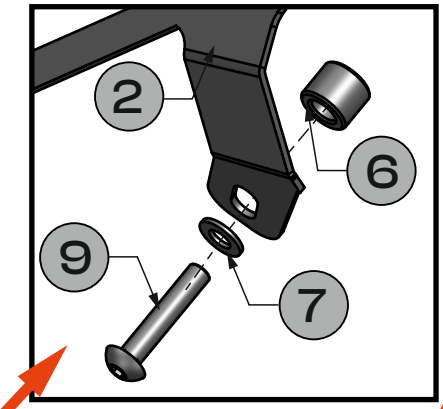


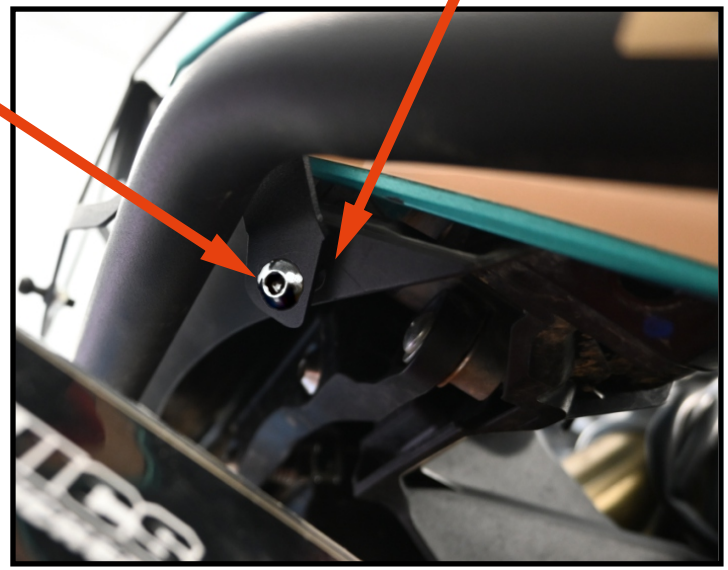
Fig.4



Fig.5



Fig.6


Fig.7

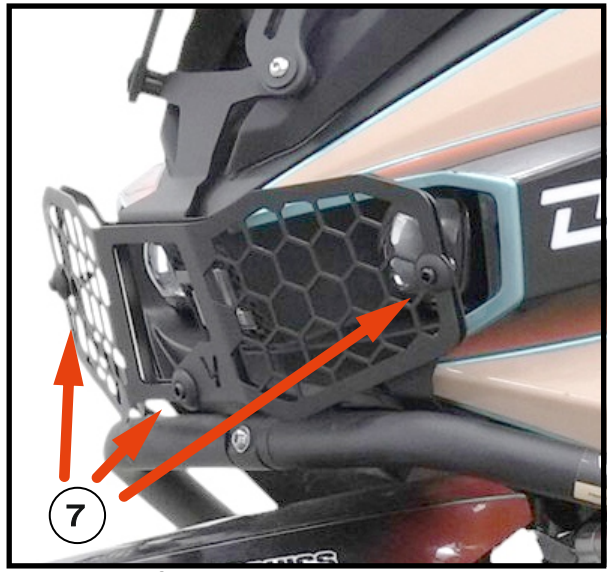


Fig.8